

DOCUMENT DETAILS V1	
Product:	Katana S Mini Wired
Type:	QSG
Date Updated:	13-08-2025
Paper Type	180GSM Thick Card

Katana S Mini Wired QSG

Front

Back

BACKLIGHTING CONTROLS

Change Effects

Increase LED Effect Speed

Decrease LED Effect Speed

Increase LED Brightness

Decrease LED Brightness

Turn Off Backlight

KEYBOARD SPECIFICATIONS :

Key Life	50 Million
Actuation Distance	2.00 ± 0.6mm
Actuation Force	60 ± 20gf
Bottom Out Distance	3.50 - 4.00mm

Professional Grade
LINEAR RED SWITCHES

Keyboard Type	Mechanical	Anti-Ghosting	nKey Rollover
Switch Brand	Jixian Red Switches	Cable	Detachable 1.8m Type-C Cable
Switch Type	3 Pin User Replaceable	Polling Rate	1000Hz
No. of Keys	68 Keys	Product Dimensions	310 x 100 x 45 mm
Backlighting	Rainbow with 18 Effects	Product Weight	554g

FACTORY RESET SETTING

If you experience issues or want to restore the keyboard to its default settings, you can perform a factory reset:

- Press and hold for a few seconds until the keyboard resets.

SYSTEM REQUIREMENTS

WARRANTY STATEMENT

Anikette EvoFox Katana S Mini Wired Mechanical Gaming Keyboard is backed by a 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced at its discretion under the following conditions:

The warranty applies to the original purchaser. Proof of original purchase is required.

The warranty does not cover the damage caused by misuse, abuse or improper storage.

In no event shall Anikette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

CUSTOMER CARE CENTER

Anikette House, C-64/4, Okhla Phase – II, New Delhi – 110020

080-11-0000 (Toll Free)

techsupport@anikette.in

www.anikette.com/en/register

MINI WIRED MECHANICAL KEYBOARD

QUICK START GUIDE

CONNECTING VIA WIRED MODE

Note: You can use your own Type-C cable if needed.

Connect the Type-C cable to the keyboard, then plug the other end into your device.

HOW TO SWAP KEYS & SWITCHES

STEP-1 Use the Keycap Puller to gently remove the desired keycap.

STEP-2 Remove the existing Switch using the Switch Puller so as to engage the clips on the Switch.

STEP-3 Place the replacement Switch in the same orientation as the removed Switch, ensuring that the legs are not being bent. Press down firmly. Place the removed Keycap back on to the replaced Switch and press down firmly.

OS MODE SWITCH

Mac OS All the Mac Modifier Keys works with pressing key.

Windows All the Windows shortcut keys works with pressing key. There's a dedicated OS-Mode button on R key.

All Multimedia functions works with key.

All the Multimedia functions works in Game Mode.

ALL KEYS ANTI GHOSTING

With full n-key rollover and anti-ghosting, every keypress is accurately registered – even when multiple keys are pressed simultaneously.

KNOW YOUR KEYBOARD

WHAT'S IN THE BOX