

DOCUMENT DETAILS		V1
Product:	Deck 2	
Type:	QSG	
Date Updated:	23-12-2025	

EvoFox Deck 2 QSG

Front

[Back](#)

WARRANTY STATEMENT


Amkette EvoFox Deck 2 Smartphone Gamepad is backed by a 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced at its discretion under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.


Please contact our Technical Support Line and/or send the defective product, postage pre paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

CUSTOMER CARE SERVICE CENTER


Amkette House, C-64/4, Okhla, Phase-II, New Delhi-110020



1800-11-9090 (Toll Free) (9:30 AM - 6:00 PM)




+91 9312691448 (9:30 AM - 6:00 PM)




techsupport@amkette.in

FOR HASSLE FREE SERVICE REGISTER YOUR PRODUCT AT WWW.AMKETTE.COM/REGISTER



EVOFOX DECK 2

Smartphone Gamepad



QUICK START GUIDE

PRODUCT OVERVIEW

FOR ANY HELP
PLEASE SCAN THE QR CODE

1. TO POWER OFF PRESS THE ODO BUTTON FOR 3 SECONDS

2. GAMEPAD TURNS OFF AFTER 5 MIN OF NO ACTION

Micro Button

Reset Button

RESET THE GAMEPAD

In the unlikely event the Gamepad is not responsive, use a pin to press the **RESET** button located at the back.

TROUBLESHOOTING

- Controller not pairing → Reset and re-enter mode.
- No lights → Charge battery and check cable.
- Macros not working → Re-record after reset.
- LED not responding → Check RGB Mode settings.

FOR ANY HELP
PLEASE SCAN THE QR CODE

SPECIFICATIONS

Connectivity	: Bluetooth 5.0 + EDR	Charging Time	: 2.5 ~ 3 hrs
Platforms	: Android, iOS, Windows, Mac, Switch	Auto-Sleep	: 30 s (no connection) / 10 min (idle)
Triggers & Joysticks	: 3D Magnetic Hall	Build	: ABS Body
Vibration Motors	: Dual Vibration Motors	Play Time	: 4 ~ 6 Hrs
Battery	: 800 mAh	Product Dimension	: 112.2 x 214 x 58.3mm
Charging Port	: Type-C	Product Weight	: 270g

VIBRATION CONTROL

Increase Vibration
Press E2 Click-Mode + R1

Decrease Vibration
Press E2 Click-Mode + L1

BACKLIGHT CONTROLS

You can control the backlight for the Analog Joysticks and the Action Buttons.

Short Press
Cycle through 10 RGB lighting modes.

Long Press 3S
Turn OFF RGB lighting

RGB Button + D-Pad Up: Increase Brightness

RGB Button + D-Pad DOWN: Decrease Brightness

RGB Button + D-Pad RIGHT: ABXY RGB ON/OFF

IN THE BOX

CHARGING THE GAMEPAD

ENSURE THE GAMEPAD IS FULLY CHARGED BEFORE FIRST USE

TYPE C Charging Port

- **Play Time:** 4-6 Hrs
- **Charge Time:** 2.5-3 Hrs
- **Battery:** 800 mAh Li-Ion

Use the included USB-C cable to charge your EvoFox Deck 2.

 
Low Battery
Keymap Button LED Blink Red

Fully Charged
Keymap Button LED Blink Green


Use 5 V / 1 A adapter *only* (power adapter not included in the box).

NATIVE IPHONE, IPAD AND APPLE TV MODE

- 1 Long Press the **DOJO** button for 3 sec.
- 2 Open Bluetooth Settings on your device.
- 3 Connect to "Xbox Wireless Controller".

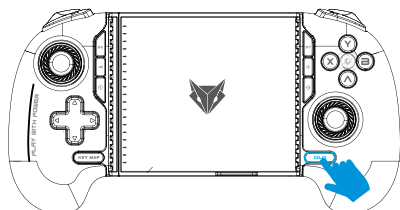

Download the official
EvoBox DOJO App

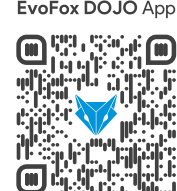  



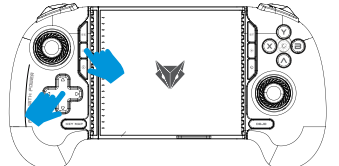 
 
IOS / iPadOS


RECONNECTING: SIMPLY PRESS THE DOJO BUTTON TO POWER ON AND RECONNECT THE GAMEPAD TO THE LAST PAIRED MODE

TURBO BUTTON FUNCTION

- 1 ENTER THE TURBO SPEED FUNCTION**
ENABLE: Press the **TURBO** Button and Press the following Button **L,B,L,T,R,B,R,T,A,B,X,Y**.
DISABLE: Repeat above step to disable the **TURBO**.

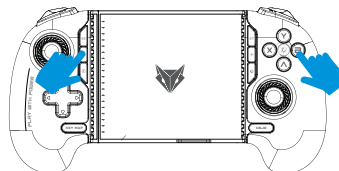

 - 2 ADJUST TURBO SPEED**
 Press the **TURBO** Button with the **D PAD UP** to increase & **D PAD DOWN** to decrease the **TURBO** Speed.

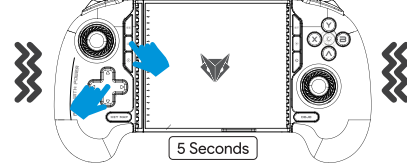

- 3 CLEAR ALL TURBO SETTINGS**
 Press the **TURBO** button until the gamepad vibrates.







5 Seconds

-4-


-13-

MACRO FUNCTION (EZ Click Button)


- RECORD MACRO**
 Press EZ Click + ML or MR → Keypad and Dojo Buttons blink Pink.
 Press desired combos (s 16 actions).

- SAVE MACRO**
 Press ML / MR again.

- CLEAR MACRO**
 - Press EZ Click + MR/ML button.
 - Press the desired MACRO button to Clear the MACRO.
 - Gamepad vibrates to confirming MACRO is cleared.

- CLEAR ALL MACROS**
 Press EZ Click for 5s.


NATIVE ANDROID MODE

- Long Press the DOJO button for 3 sec.
- Open Bluetooth Settings on your device.
- Connect to "Xbox Wireless Controller".



Download the official
EverFox DOJO App



Android

RECONNECTING: SHIPLY PRESS THE DOJO BUTTON TO POWER ON AND RECONNECT THE GAMEPAD TO THE LAST PAIRED DEVICE

ANDROID HID MODE



- Press **(A) + DOJO** button for 3 sec.
- Open Bluetooth Settings on your device.
- Scan the devices and pair with "EvoFox Deck 2".

RECONNECTING: SIMPLY PRESS (A) + DOJO BUTTON TO RECONNECT THE GAMEPAD

ACCURACY MODE

ENABLE ACCURACY MODE

Enable Accuracy Mode

- Neon RGB flashes 2 Times - Enabled
- Green RGB flashes 2 Times - Disabled

Right Joystick
Hold Precision Button + R1

Left Joystick
Hold Precision Button + L1

Disable Accuracy Mode

Press the same combination again to Deactivate.

TIPS: ACCURACY MODE LOCKS JOYSTICK MOVEMENT TO PRECISE X / Y AXES FOR STRAIGHTER, MORE CONTROLLED INPUT— PERFECT FOR AIMING, STEERING, OR LINE DIRECTIONAL MOVEMENT. GREAT FOR FPS PRECISION AIMING, RACING LINE ADJUSTMENTS, OR FIGHTING GAMES WHERE STRAIGHT-LINE ACCURACY MAKES ALL THE DIFFERENCE.

WINDOWS PC MODE

- Long press **DOJO** button for 3 sec.
- Open Bluetooth Settings on your device.
- Scan the devices and pair with "Xbox Wireless Controller".

RECONNECTING: SIMPLY PRESS THE DOJO BUTTON TO POWER ON AND RECONNECT THE GAMEPAD


PRECISION MODE

PRECISION MODE – Adjust View Sensitivity

Enable / Disable Precision Mode

Press the Precision Mode Button once to Activate.

Press again to Deactivate.

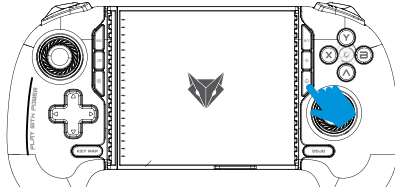

Red LED Flashes 2 Times - Enabled


Blue LED Flashes 2 Times - Disabled

TIPS: PRECISION MODE REDUCES JOYSTICK SENSITIVITY BY 50%, PROVIDING SMOOTHER AND MORE STABLE CONTROL—IDEAL FOR ACCURATE AIMING AND FINE MOVEMENT IN FPS AND RACING GAMES.

KEY MAP MODE (Only for Android)

Set up your gamepad to play games that do not have Native Controller Support.

- 1 Long press the **KEY MAP** button for 3 sec.
- 2 Open Bluetooth Settings on your device.
- 3 Connect to “EvoFox Deck 2”.

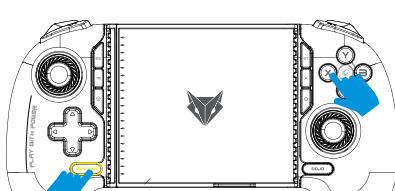


RECONNECTING: SIMPLY PRESS THE KEY MAP BUTTON TO POWER ON AND RECONNECT THE GAMEPAD TO THE LAST PAIRED MODE

HOW TO PROGRAM YOUR CONTROLLER FOR KEY MAP MODE (Android Only)

Ready to Conquer PUBG/BGMI, Free Fire, Genshin, or Mobile Legends? Follow this Guide to program your EvoFox Deck.

PUBG/BGMI Programming Steps:

1. Download the **Keylinker App** from Google Play Store or Apple Store.
2. To pair the EvoFox Deck 2 via Bluetooth, press and hold the **Keymap Button** until Yellow LED starts blinking rapidly.
3. Go to Bluetooth Settings on your phone and connect to "EvoFox Deck 2".
4. Launch the Keylinker App, grant all required permissions, then tap on "EvoFox Deck 2" within the app to connect. Once connected, the customization interface will open automatically.
5. The Keylinker App includes preset control layouts for many popular games such as **BGMI, Free Fire, COD Mobile, Genshin Impact, FIFA Mobile** and more. You can also customize and save your own layouts for any game.
6. Launch your game while the Keylinker App is running in the background. Then go to your game's control → **Customize Layout** → **Adjust Button Mapping** according to your play style.
7. In the Keylinker App, tap the on-screen Mapping Icon  to reveal all buttons available for configuration, then drag and place them over the game's touch controls.

JOYSTICK CALIBRATION

1. **POWER OFF CONTROLLER**
2. **ENTER CALIBRATION MODE**
Hold Select + A + Dojo until Keypad and Dojo LED flashes Red/Blue alternatively.
3. **CALIBRATING**
 - Move both joysticks in full circles 2-3 times.
 - Press Triggers and Bumper buttons 2 times.
 - Press Start button → Calibration done!