

DOCUMENT DETAILS	
Product:	Play 2 Wireless
Type:	User Manual
Date Updated:	12-11-2025

PLAY 2 WIRELESS QSG

Front

Back

WARRANTY STATEMENT

Amkette EvoFox PLAY 2 Wireless Gamepad is backed by a 1 Year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- Amkette is not responsible for any direct, incidental, consequential or other damages of any kind.

Please contact Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

CUSTOMER CARE SERVICE CENTER

Amkette House, C-64/4, Okhla, Phase-II, New Delhi-110020

1800-11-9090 (Toll Free) (9:30 AM - 6:00 PM)

+91 9312691448 (9:30 AM - 6:00 PM)


techsupport@amkette.in

For Hassle Free Service Register Your Product at www.amkette.com/register



QUICK START GUIDE

PRODUCT OVERVIEW

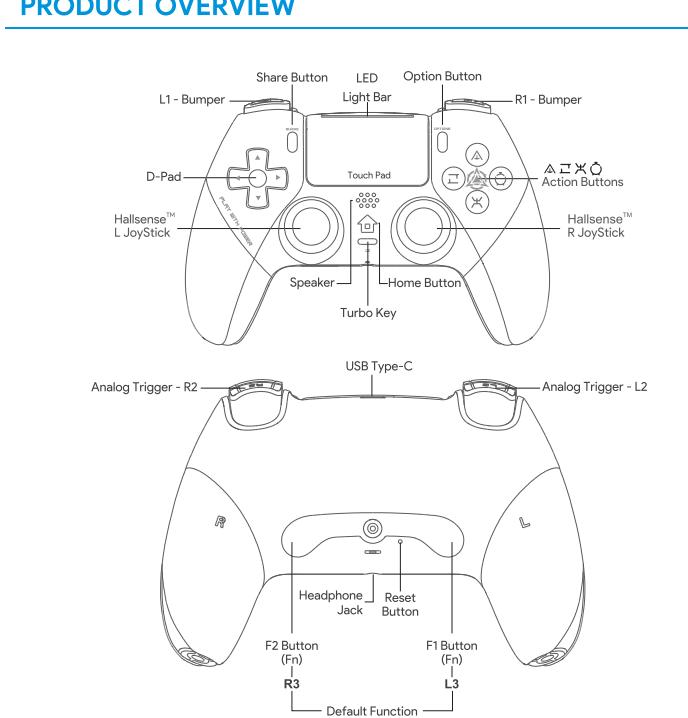

SPECIFICATIONS

Connectivity	Bluetooth & Wired
Supported Platforms	PS4 (Console/Pro/Slim), PS5 (PS4 games only), PC (X-Input/D-Input), Smartphones
Operating Distance	<10m
Touchpad	Yes w/ LED Light Bar
Headphone Jack	3.5mm (Only PS4/PS5 Supported)
Speaker	Yes (Only PS4/PS5 Supported)
Vibration Motors	Dual Vibration Motors
Gyroscope	6-Axis
Polling Rate	1000 Hz (Wired), 255Hz (BT)
Charging Cable	1.8m USB to Type-C Cable
Battery	800 mAh
Play Time	Up to 10 Hrs
Joysticks and Triggers	2-Magnetic Hall 3D Joystick, 2- Analog Triggers
Charging Time	<3hrs
Product Dimension	160x110x65mm
Product Weight	260g

 
HOW TO RESET

If your controller won't pair, won't respond, or is displaying a flashing light, you'll need to reset the controller. To do that, just use a small tool and push the reset button.

EASY CLICK SETUP (MACROS)


- MACRO SEQUENCES**
 - The following keys can be used as a Macro Sequence while recording MACROS
 - X, Q, Z, A, S (Up), D (Down), ← (Left), → (Right), L3, R3, L1, R1, L2, R2
- ENABLE MACRO**
 - Hold Turbo for 3 seconds → LED flashes
 - Add your MACRO sequences
 - Press F1 or F2 to assign → Controller vibrates
- CLEAR MACROs**
 - Hold Turbo for 5 seconds → Lightbar flashes
 - Press F1 or F2 → Reset to default
- DISABLE MACROs**
 - Hold Option + Turbo for 3 seconds → MACROs Disabled
 - Press again → MACROs Enabled

BOX CONTENTS



CHARGING THE GAMEPAD

Connect the controller using a USB cable. The console must be powered ON or in Rest Mode (standby).

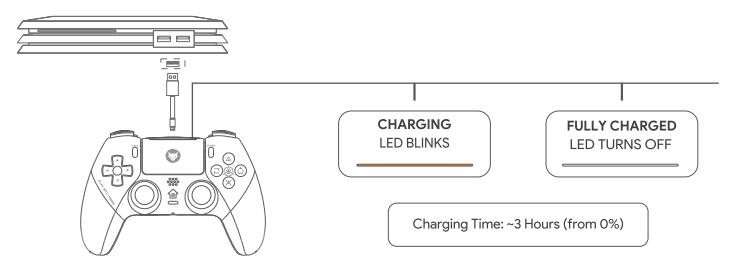

-6-

-3-

PS4/PS5® CONNECTION

- Connect to PS4/PS5 console with the provided Type-C cable.
- Press Home button and select a User.
- During connection, LED flashes White.
- Blue LED will be stable after successful connection.
- Disconnect the cable for wireless mode.

RECONNECTING: SIMPLY PRESS THE HOME BUTTON TO POWER ON AND RECONNECT THE GAMEPAD.

*IN PS5, ONLY PS4 GAMES ARE SUPPORTED

ANDROID/PC X-INPUT

- Press Share + Home button.
- Open Bluetooth Settings on the device.
- Connect to "Wireless Controller": Blue LED will be Stable.

RECONNECTING: SIMPLY PRESS THE HOME BUTTON TO POWER ON AND RECONNECT THE GAMEPAD.

iOS MFI

- Press Share + Home buttons.
- Open Bluetooth Settings on the device.
- Connect to "DUALSHOCK 4 Wireless Controller": Red LED will be Stable.

RECONNECTING: SIMPLY PRESS THE HOME BUTTON TO POWER ON AND RECONNECT THE GAMEPAD.

TURBO SETTINGS

Enter the TURBO Speed Function:
ENABLE: Press the TURBO and following buttons to enable Turbo.



DISABLE: Repeat above step to disable the turbo.

-4-

-5-

Size:143*102mm