 


TURBO SETTINGS

- Enter the TURBO Speed Function:**
ENABLE: Press the TURBO button and one of the following buttons.
DISABLE: Press Turbo + Clear + Button to which TURBO is assigned.
- Adjust TURBO Speed:**
 Press the TURBO button with the DPAD to increase or decrease the turbo speed.

-8-


CHANGING VIBRATION LEVELS

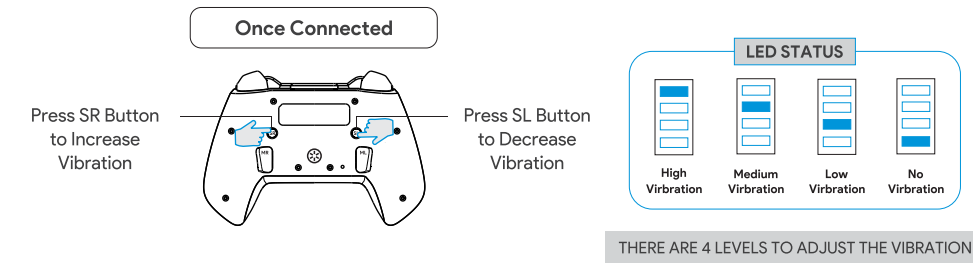

RGB LED CONTROL

Press the RGB LED Control Button to switch between 3 Lighting Modes.

- BREATHING RGB
- SINGLE COLOUR
- NO LED

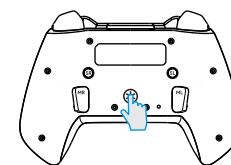

-9-


ENHANCE JOYSTICK PRECISION

- Enable Joystick Precision**
Press E Z + LEFT JOYSTICK
- Disable Joystick Precision**
Again Press E Z + LEFT JOYSTICK



SWITCH BETWEEN ANALOG MODE TO DIGITAL MODE

- Analog Mode <-> Digital Mode**
Single Press EvoFox Button, until the LED indicators change.

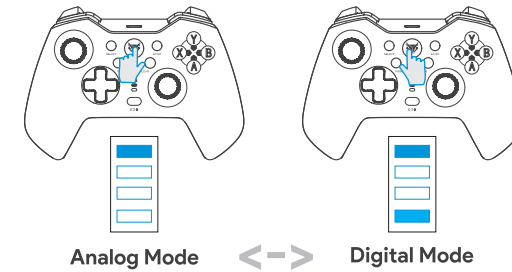

-10-

TROUBLESHOOTING

- Why is the Gamepad not being detected by my computer?**
- Make sure the computer USB port is working. Try a different USB Port.
- How to Reset the Gamepad?**
- Simply Plug out the USB cable and Plug it back to reset the Gamepad.
- Why is the Gamepad not working in all my games?**
- Ensure that the game has support for Gamepads.
 - Set the Gamepad mode to D-Input and try again.
- Why is the Gamepad not vibrating?**
- Not all Games have vibration or the vibration setting needs to be turned on (in the game).

SPECIFICATIONS

Working Platforms : Windows/Android	Vibration Motors : Dual Vibration Motors
Working Modes : PC - X-Input / D-Input	Net Weight With Cable : 245g
Connection Type : Wired	Product Dimensions : 155x110x70mm

-11-

WARRANTY STATEMENT

Amkette EvoFox Elite X RGB Wired Gamepad is backed by a 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced at its discrete under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

CUSTOMER CARE SERVICE CENTER

Amkette House, C-64/4, Okhla, Phase-II, New Delhi-110020


- 1800-11-9090 (Toll Free) (9:30 AM - 6:00 PM)
- +91 9312691448 (9:30 AM - 6:00 PM)
- techsupport@amkette.in

FOR HASSLE FREE SERVICE REGISTER YOUR PRODUCT AT WWW.AMKETTE.COM/REGISTER



EVOFOX
PLAY WITH POWER

PRODUCT OVERVIEW

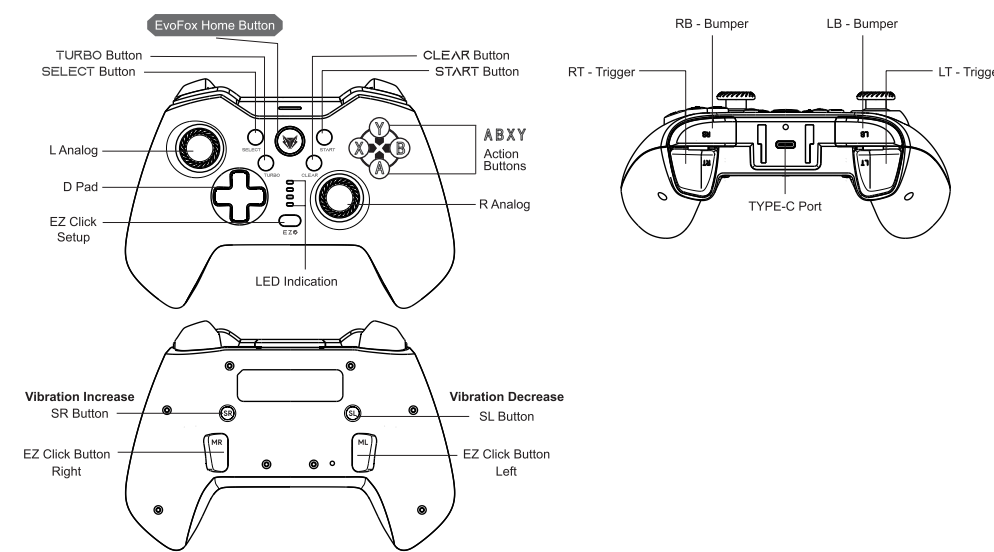

-3-


GETTING STARTED

USB Plug n' Play Setup

- Attach the provided clip to the Gamepad.
- Insert the Type C cable to the Gamepad.
- Insert the USB A side to the PC.

GAMEPAD ALWAYS STARTS IN X-INPUT MODE

IN THE BOX

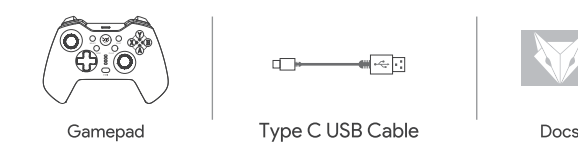


-4-

SETUP THE GAMEPAD

Windows PC Mode

COMPATIBILITY - SUPPORTED WINDOWS VERSION
For instant connection, plugin the provided USB Cable


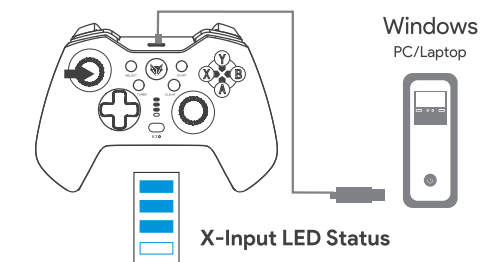


-5-

CHANGING MODES IN WINDOWS PC

X-Input <-> D-Input

Long Press EvoFox Button, until the LED indicators change.

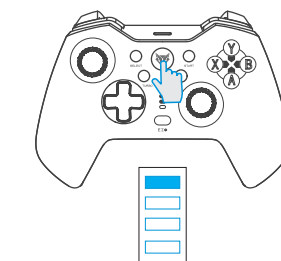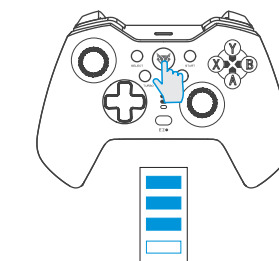

-6-

EASY CLICK SETUP (MACROS)

- Enter EASY CLICK Setup**
 Long Press E Z + EZ Click R or EZ Click L Button
- Setup the MACRO using** following buttons →
- Now Press EZ Click R or EZ Click L button to exit the MACRO Set Up.**
- CLEAR MACRO'S**
 Long Press E Z Button, to clear the MACRO until the LED Flashes and Gamepad Vibrates.
Your MACRO is now cleared.

-7-