

DOCUMENT DETAILS V2	
Product:	One S
Type:	QSG
Date Updated:	25-05-2026

EASY CLICK SETUP (MACROS)

1 Enable MACRO

Press **⇧** + **MR** or **⇧** + **ML** together to set Macro. Current LED will Blink and Controller will vibrate for 0.5sec.

1. YOU CAN USE UP TO 16 BUTTON IMPRESSIONS TO SET UP THE MACRO.
2. THE BUTTON SHOULD BE PRESSED ONLY IN THE SEQUENCE TO CREATE THE MACRO.

2 Disable Macro

Repeat the above step 1.

3 CLEAR MACRO'S

Long Press **⇧** for 5sec to clear All the MACROS
Your MACRO is now cleared.

TURBO SETTINGS

1 Enter the TURBO Speed Function:
ENABLE: Press the TURBO button and press the following button LB,LT,RB,RT,A,B,X,Y
DISABLE: Repeat above step to disable the turbo

2 Adjust TURBO Speed:
Press the TURBO button with the DPAD to increase or decrease the turbo speed

3 Clear ALL TURBO Setting:
Long press the TURBO button until gamepad vibrates.

CHANGING VIBRATION LEVELS

Press **⇧** + Left Joystick Up to increase the vibration level

Press **⇧** + Left Joystick Down to decrease the vibration level

Once Connected

There are 4 levels to adjust the vibration

LEVELS	
High Vibration	Medium Vibration
Low Vibration	No Vibration

Press **⇧** + UP for 3 Sec.
Controller Vibrates for 0.5 Sec.
This is especially useful for fighting games, retro platformers, and more.

ENABLE ACCURACY MODE

Enable Accuracy Mode
Press **⇧** + Left Joystick/Right Joystick

Disable Accuracy Mode
Again Press **⇧** + Left Joystick/Right Joystick

When enabled, Accuracy Mode makes your joystick movements more accurate by:

- Prioritizing straight-line movement along the X or Y axis
- Preventing accidental diagonal input from minor thumb movements
- Expanding joystick input to a square range for full directional control

When to use
Ideal for aiming in Fighting games like Tekken, Mortal Kombat, menu navigation, or any situation where clean, straight input is required.

RESET THE GAMEPAD
In the unlikely event the Gamepad is not responsive, use a pin to press the RESET button located at the back.

CALIBRATING THE GAMEPAD

1 Ensure the controller is powered OFF.

- Make sure the controller is completely turned OFF.

2 Simultaneously press the **A + X + Home** buttons.

- Press these three buttons together, and the red, blue, and green LEDs will flash alternately.

3 Press the **START** button (calibrate the gyroscope).

- Place the controller flat on the table, and the blue LED will remain solid, indicating that the gyroscope is being calibrated.

4 Press the **START** button again (calibrate the triggers and joysticks).

- Move the joysticks in a full circle twice and press the triggers all the way down twice. The white LED will light up, signaling that the calibration is successful.

5 After Calibration, the controller will shut down automatically.

Working Platforms	: iPhone, iPad, Android, PS3, PS4, PC, Switch	Charging Time	: ~ 2 hrs
Working Mode	: PC - X-Input/D-Input, PS3/PS4, Android HID, iOS MFI	Working Distance	: 10m
Play Time	: 8-10 hrs (With Vibration) 14-16 hrs (No Vibration)	Battery	: 600mAh
Connectivity Modes	: Bluetooth, 2.4G, Wired	Polling Rate	: 1000Hz
		Product Dimensions & Weight	: 150 x 101 x 40mm & 207g

WARRANTY STATEMENT

Amkette EvoFox One S Universal Wireless Gamepad is backed by a 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced at the company's discretion under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

CUSTOMER CARE SERVICE CENTER
Amkette House, C-64/4, Okhla, Phase-II, New Delhi-110020

1800-11-9090 (Toll Free)
(9:30 AM - 6:00 PM Mon-Sat)

techsupport@amkette.in

Scan For Whatsapp
9:30 AM - 6:00 PM
Mon - Sat

FOR HASSLE FREE SERVICE REGISTER YOUR PRODUCT AT WWW.AMKETTE.COM/REGISTER

PRODUCT OVERVIEW

TURBO Button
SELECT Button
D Pad
HallSense™ Left Joystick
EZ Click Button Right
EZ Click Button Left
Reset Button

Charging LED
EZ CLICK Button START Button
A B X Y Action Buttons
HallSense™ Right Joystick
LED Indicator
Home Button

RB - Bumper
LB - Bumper
Analog Trigger-RT
Analog Trigger-LT
TYPE-C Charging Port

POWER SAVING
1. SLEEP AFTER 10 SEC OF DISCONNECTION.
2. TURNS OFF AFTER 5 MIN OF NO ACTION.
3. TO POWER OFF PRESS THE HOME BUTTON FOR 5 SEC.

IN THE BOX

Wireless Gamepad

Charging Cable

USB Extender Cable

Docs

HyperConnect™ 2.4G Receiver

CHARGING THE GAMEPAD

CHARGING LED BLINKS

FULLY CHARGED LED TURNS OFF

ENSURE GAMEPAD IS FULLY CHARGED BEFORE FIRST USE

MODES AND PLATFORMS

The One S supports the following Modes and each Mode supports the following Platforms respectively.

Bluetooth

android iOS PC
STEAM SWITCH PS4

HyperConnect™ 2.4G Receiver

STEAM PC
SWITCH PS4

STEAM PC
SWITCH PS4

BLUETOOTH MODE

1 Press **X + Home** buttons.

2 Open Bluetooth Settings on the device.

3 Connect to "Xbox Wireless Controller": LED will be Stable.

RECONNECTING: SIMPLY PRESS THE HOME BUTTON TO POWER ON AND RECONNECT THE GAMEPAD.

PC X-INPUT

1 Press **X + Home** buttons.

2 Open Bluetooth Settings on the device.

3 Connect to "Xbox Wireless Controller": LED will be Stable.

RECONNECTING: SIMPLY PRESS THE HOME BUTTON TO POWER ON AND RECONNECT THE GAMEPAD.

BLUETOOTH MODE

1 Press **X + Home** buttons.

2 Open Bluetooth Settings on the device.

3 Connect to "Xbox Wireless Controller": LED will be Stable.

RECONNECTING: SIMPLY PRESS THE HOME BUTTON TO POWER ON AND RECONNECT THE GAMEPAD.

ANDROID/IOS MFI

BLUE LED

THE CONTROLLER IS XBOX BUTTON LAYOUT, WHEN CONNECTING TO THE X-BOX CONSOLE, ABXY BUTTON PRESS A TO GET OUT OF B, PRESS B TO GET OUT OF A, PRESS Y TO GET OUT OF X, AND PRESS X TO GET OUT OF Y

BLUETOOTH MODE

1 Connect to PS4 or PS3 with the provided cable.

2 Wait for the console to detect the controller before pressing the HOME Button.

3 White LED will be stable after successful connection.

4 Disconnect the cable for wireless mode.

RECONNECTING: SIMPLY PRESS THE HOME BUTTON TO POWER ON AND RECONNECT THE GAMEPAD.

PS3/PS4

WHITE LED

THE CONTROLLER IS XBOX BUTTON LAYOUT, WHEN CONNECTING TO THE X-BOX CONSOLE, ABXY BUTTON PRESS A TO GET OUT OF B, PRESS B TO GET OUT OF A, PRESS Y TO GET OUT OF X, AND PRESS X TO GET OUT OF Y

BLUETOOTH MODE

1 Press **Y + Home** buttons. and search for Pro Controller

2 The console assigns the controller channel light color as follows:

User 1: Blue
User 2: Red
User 3: Green
User 4: Pink
User 5 and above: Purple

THE CONTROLLER IS XBOX BUTTON LAYOUT, WHEN CONNECTING TO THE X-BOX CONSOLE, ABXY BUTTON PRESS A TO GET OUT OF B, PRESS B TO GET OUT OF A, PRESS Y TO GET OUT OF X, AND PRESS X TO GET OUT OF Y

SWITCH

1 Press **Y + Home** buttons. and search for Pro Controller

2 The console assigns the controller channel light color as follows:

User 1: Blue
User 2: Red
User 3: Green
User 4: Pink
User 5 and above: Purple

THE CONTROLLER IS XBOX BUTTON LAYOUT, WHEN CONNECTING TO THE X-BOX CONSOLE, ABXY BUTTON PRESS A TO GET OUT OF B, PRESS B TO GET OUT OF A, PRESS Y TO GET OUT OF X, AND PRESS X TO GET OUT OF Y

2.4G MODE

1 Press **LB + Home** buttons for 2 seconds.

2 Purple LED will be stable after successful connection.

3 Then connect your 2.4G receiver to your device and it will connect to your PC X-input/Switch.

GAMEPAD ALWAYS STARTS IN X-INPUT MODE

PAIRING

1. Insert the dongle into a USB port and long press its button until the LED blinks fast.

2. Long press the **LB + Home** button on the gamepad until the LEDs blink fast.

3. The gamepad will connect automatically.

FIRST TIME SETUP MAY REQUIRE A PRESS OF THE RESET BUTTON AFTER PLUGGING IN THE USB RECEIVER.

PC X-INPUT/SWITCH

PURPLE LED

Windows PC Laptop

HyperConnect™ USB Receiver

USB Extender

USB WIRED MODE

1 Simply just connect your gamepad using type c cable and start to play.

2 Blue LED will be stable after successful connection.

3 White LED will be stable after successful connection in PS3/PS4.

D-INPUT

1 Press **Start + Select** to Switch into D-Input.

1 Red LED will be stable after successful connection for D-Input.

RECONNECTING: SIMPLY PRESS THE HOME BUTTON TO POWER ON AND RECONNECT THE GAMEPAD.

PC X-INPUT/PS3/PS4/SWITCH

BLUE LED

RED LED