

DOCUMENT DETAILS V1	
Product:	Elite S Wired
Type:	QSG
Date Updated:	08-06-2026

Front

Back

CLEAR MACROS

Press and hold the **EZ Click Button** + **ML** or **MR** button for 3 seconds to enter programming mode, then press the same **ML** or **MR** button again without recording any command to clear the macro.



Clear All Macro

Long Press **EZ Click Button** for 5s to clear all the Macros.
Your Macro is now cleared.



TURBO FUNCTION

1 Activate Turbo

Hold the **Turbo** button, then press the button you want to assign Turbo to from **A / B / X / Y / LB / RB / LT / RT**.

THE SELECTED BUTTON WILL NOW PERFORM RAPID-FIRE INPUT WHEN PRESSED.

2 Activate Auto Turbo

Hold the **Turbo** button, then press the button twice to assign Auto Turbo from **A / B / X / Y / LB / RB / LT / RT**.

THE SELECTED BUTTON WILL NOW PERFORM RAPID-FIRE CONTINUOUSLY.

3 Clear Turbo / Auto Turbo

Hold the **Turbo** button, then press the assigned button three times to clear Turbo / Auto Turbo.

4 Adjust Turbo Speed

Hold the **Turbo** button and press:

D-Pad Up Increase Turbo speed

D-Pad Down Decrease Turbo speed

VIBRATION LEVEL ADJUSTMENT

Press **EZ Click Button** + **Left Joystick Up** to increase the vibration level

Once Connected

Press **EZ Click Button** + **Left Joystick Down** to decrease the vibration level

LEVELS			
High Vibration	Medium Vibration	Low Vibration	No Vibration

THERE ARE 4 LEVELS TO ADJUST THE VIBRATION

SPECIFICATIONS

Connectivity : Wired USB	Joysticks : Magnetic Hall Effect 3D Joysticks
Compatibility : Windows PC	Macro Buttons : 2 Programmable Macro Buttons
polling Rate : 1000 Hz	Vibration : Dual Vibration Motors
Cable Length : 1.8m	RGB Lighting : Joystick LED Ring
Product Weight : 207 g	Product Dimensions : 150 × 110 × 58 mm

WARRANTY STATEMENT

Amkette EvoFox Elite S Wired is backed by a 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced at the company's discretion under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

CUSTOMER CARE SERVICE CENTER

Amkette House, C-64/4, Okhla, Phase-II, New Delhi-110020

1800-11-9090 (Toll Free)
(9:30 AM - 6:00 PM Mon-Sat)

techsupport@amkette.in


FOR HASSLE FREE SERVICE REGISTER YOUR PRODUCT AT WWW.AMKETTE.COM/REGISTER

ELITE S WIRELESS GAMEPAD



QUICK START GUIDE

PRODUCT OVERVIEW

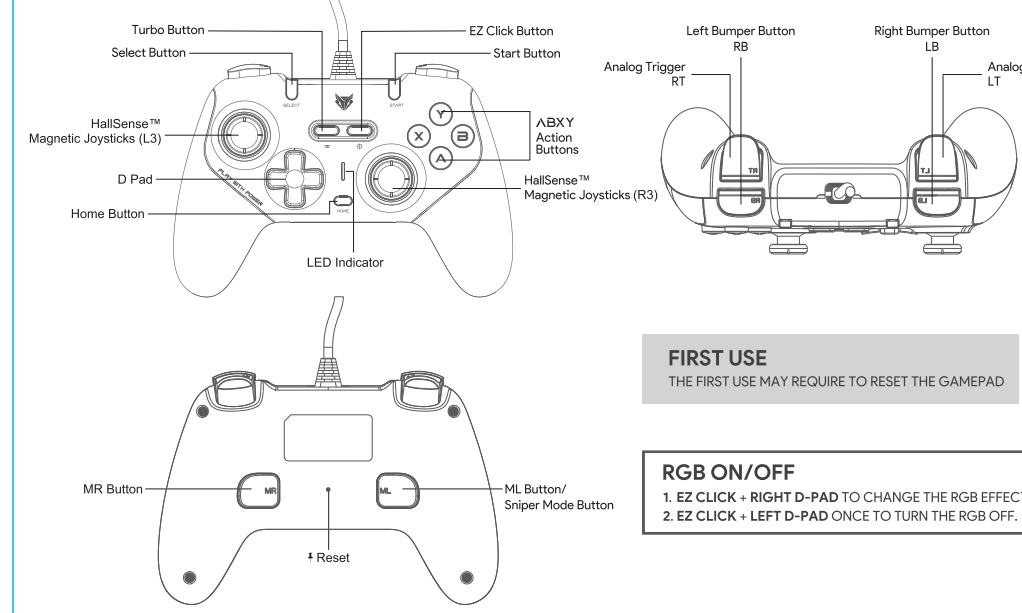

FIRST USE
THE FIRST USE MAY REQUIRE TO RESET THE GAMEPAD

RGB ON/OFF
1. EZ CLICK + RIGHT D-PAD TO CHANGE THE RGB EFFECT.
2. EZ CLICK + LEFT D-PAD ONCE TO TURN THE RGB OFF.

IN THE BOX

Wired Gamepad | Docs

CONNECTION VIA USB WIRED X-Input

Plug the USB cable into your PC or supported device.

COMPATIBILITY – SUPPORTED WINDOWS VERSION ➔ Windows 7, 8, 10, 11

- 1 Plug the USB cable into your PC or supported device.
- 2 The system will automatically detect the controller.
- 3 The LED indicator will turn ON to confirm the successful connection.

D-Input

- Press and hold the **SELECT** + **START** buttons simultaneously for 3 seconds to switch to D-input mode.

PRECISION / SNIPER MODE

Precision Mode (Sniper Mode) helps improve aiming accuracy in FPS games by reducing joystick sensitivity for finer control.

ON-THE-FLY SNIPER MODE

- 1 **Activate Sniper Mode**
Press **EZ Click** + **LB** for 0.5s → vibration feedback → Sniper Mode ON.
- 2 **Deactivate Sniper Mode**
Press the same combination again.
- 3 **Activate On-the-fly Sniper Mode**
Hold the **ML Button** to activate Sniper Mode.
- 4 **Deactivate On-the-fly Sniper Mode**
Release the **ML Button** to return to normal sensitivity.

ML BUTTON IS ASSIGNED AS SNIPER MODE BY DEFAULT. THIS BUTTON CAN ALSO BE REPROGRAMMED AS A MACRO BUTTON IF REQUIRED.

ACCURACY MODE

Accuracy Mode enhances aiming precision by adjusting joystick response for controlled movements.

- 1 **Activate Accuracy Mode**
Press and hold the **EZ Click Button** + **R3** or **L3 Button** to activate the accuracy mode on the respective joysticks.
- 2 **Deactivate Accuracy Mode**
Repeat the same combination to switch back to normal mode.

DISABLING DIAGONAL DIRECTION FOR GAMEPAD

- 1 **Disable Diagonal Direction**
Press **EZ Click Button** + **D-Pad UP** for 3s. Controller Vibrates for 0.5s. This is especially useful for fighting games, retro platformers, and more.
- 2 **Restore Default**
Repeat the same button combination or reconnect the controller to reset to default settings.

RGB CUSTOMIZATION

The controller features RGB lighting around the joystick ring.

- 1 **Change RGB Mode**
Press **EZ Click Button** + **Right D-Pad Button** to cycle through different RGB lighting modes.
- 2 **Turn OFF RGB Lighting**
Press **EZ Click Button** + **Left D-Pad Button** once to turn off the RGB lights.

EASY CLICK SETUP (MACROS)

- 1 Press and hold the **EZ Click Button** + **ML** or **MR** button for 3 seconds to enter the programming mode.
- 2 Setup the MACRO using following buttons ➔
- 3 Press the **ML** or **MR** button again to assign the macro.

Green LED X-input | White LED D-input

Z Fold