


AMKETTE

QUICK START GUIDE

Amkette Boomer Compact Soundbar

KNOW YOUR SPEAKER

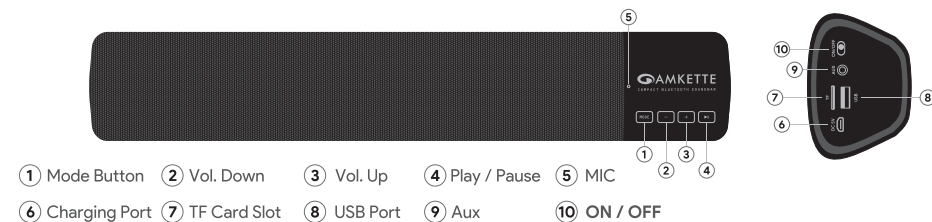

WHAT'S IN THE BOX


Speaker, User Manual, Aux Cable, Micro USB Charging Cable

-2-

GETTING STARTED: CHARGING THE SPEAKER

Charge the speaker before use and keep speaker OFF for faster charging.

- Connect the Micro USB end of the included Micro USB cable to the USB Charging Port of the speaker.
- Connect the standard USB plug end of the cable to a powered USB port on a Desktop / Laptop or any 5V USB AC adaptor (Not included).

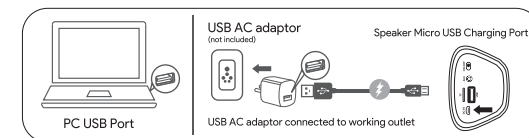

The status indicator light will be solid RED when charging and will turn OFF once fully charged.

POWER ON / OFF

Slide Down to Switch ON the speaker. ON

Slide Up to Switch OFF the speaker. OFF

-3-

BLUETOOTH PAIRING

Bluetooth pairing with Smartphone or Laptop for the first time.


- Turn ON the Amkette Boomer Soundbar speaker.

The status indicator light on the front of the speaker will flash blue indicating the pairing mode.

- "Amkette Boomer Compact Soundbar" should appear in your device's Bluetooth menu. Select "Amkette Boomer Soundbar".

When connected the blue LED indicator will remain ON

Note 1: When the speaker is under Bluetooth mode, it will be connected to the last connected device by default. If you want to connect the speaker to another device you need to disconnect from the original device.

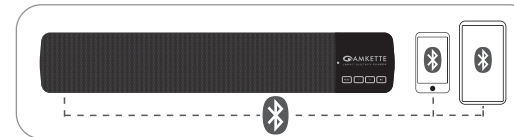

-4-

OPERATING FM RADIO

- Press (MODE) button) to switch into FM mode.
- Long Press (Play / Pause) button) to automatically search for available channels. When the searching is finished, it will start to play the first channel.
- Long Press (Volume /) button) to browse and select channels.

AUX PLAYBACK

- Simply insert an AUX cable to enable AUX Playback.
- Single press (Volume /) button) for Volume Down / Up.
- Single press (Play / Pause) button) to Mute the speaker.

USB / MICRO SD PLAYBACK

- Simply insert a USB Drive or MICRO SD CARD to start listening.
- Single press (Volume /) button) for Volume Down / Up
- Long press (Volume /) button) for Prev / Next track.
- Single press (Play / Pause) button) to pause the speaker.

Note: It supports FAT 32, NTFS, EXFAT Drive.

MODE SWITCHING

When the speaker is ON, single-click the **Mode Button** to switch between Bluetooth, USB, Micro SD Card and AUX modes.

-5-

TWS (TWIN SPEAKER PARING) You can pair two of these speakers for a truly grand experience.



- Turn both speakers. Make sure they are not connected to any device.

Note: To disconnect a speaker, simply Long Press the MODE button.

- Long press Play/Pause button on **ONE** of the Speakers.

(The Speaker 1 makes a double beep sound with blue indicator light flashing quickly and the speaker opens to TWS function)

- After connecting successfully, the speaker makes a single beep sound with **BLUE LED Indicator** remains ON.
- Turn on your Bluetooth device (Smartphone or Laptop) and connect with "Amkette Boomer Compact Soundbar."

To discontinue the TWS functionality of the speaker long press Play / Pause button. You will hear a single beep noise when TWS functionality is discontinued.

-6-

TROUBLESHOOTING

The speaker is not working.

- Check if the speaker is turned ON and the volume is adjusted properly.
- Make sure that the device is paired / cable connected and the music source volumes is not muted.

There is no power when the speaker is turned ON.

- Please make sure that the speaker is properly charged before use.

The speaker is not able to pair with my device.

- Turn OFF the Bluetooth of any other device which is already paired & then retry.
- Long Press the Mode button to disconnect and re-connect.
- Restart the devices and speaker, and then retry.

I am using FM mode but the speaker is unable to receive any Radio channels.

- Make sure you are using the speaker in a place covered by FM signals.
- You can adjust the speaker in different positions and directions to get a better signal.

-7-

SPECIFICATIONS

Bluetooth	v5.0
Input	DC5V-1A
FM Radio	YES
Frequency Response	80Hz-20KHz
Modes	AUX, USB, MICRO SD CARD
Output	10W (5W x 2)
Drivers	52mm Neodymium
Range	Up to 10m
TWS	YES
Playback Time	up to 12 Hours
Charging Time	2-3 Hrs
MIC	YES
Battery Capacity	1800mAh
Weight	667g
Dimensions	400*55*70mm

WARRANTY

Amkette Boomer Compact Soundbar Speaker is backed by a 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

Customer Care Service Center

Amkette House, C-64/4, Okhla, Phase-II, New Delhi-110020

1800-11-9090 (Toll Free) (9:30 AM - 6:00 PM) +91 9312691448 (9:30 AM - 6:00 PM) techsupport@amkette.in

For Hassle Free Service Register Your Product-www.amkette.com/register