



EVOFOX

 
EVOFOX DECK

Smartphone Gamepad



QUICK START GUIDE

PRODUCT OVERVIEW

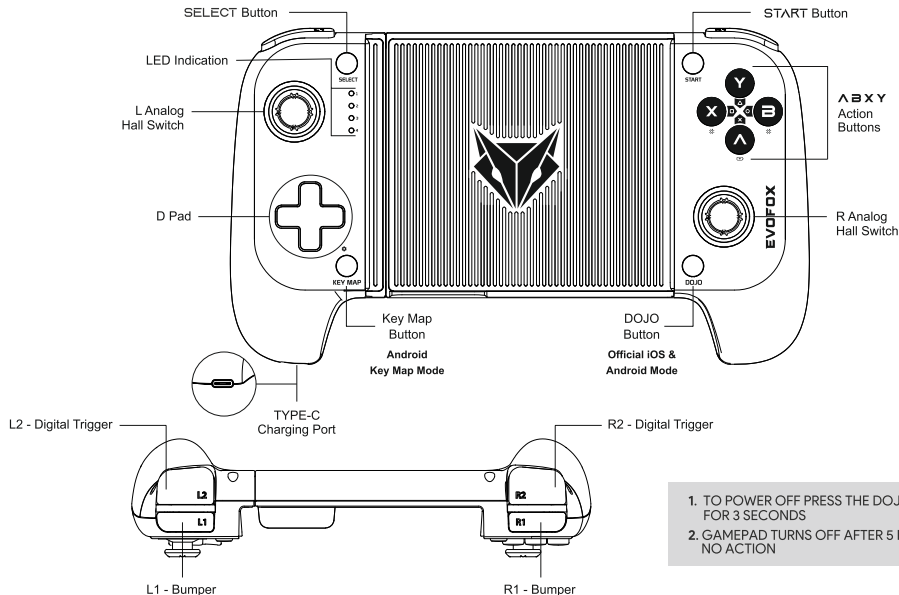

1. TO POWER OFF PRESS THE DOJO BUTTON FOR 3 SECONDS
2. GAMEPAD TURNS OFF AFTER 5 MIN OF NO ACTION

IN THE BOX



Wireless Gamepad



Charging Cable



Docs

 


Travel Pouch

CHARGING THE GAMEPAD

ENSURE THE GAMEPAD IS FULLY CHARGED BEFORE FIRST USE

TYPE C
Charging Port



PRESS KEY MAP + 
FOR BATTERY LEVELS

Plug-in one end of the provided USB charging cable into a Power Adapter (Not Included) and other end to the Gamepad. Plug the adapter to Power Socket and Turn On the Power.



25%



50%



75%

 
 


100%

BATTERY PERCENTAGE

OFFICIAL IPHONE, IPAD AND APPLE TV MODE

- 1 Press the **DOJO** button for 2 sec.
- 2 Open Bluetooth Settings on your device.
- 3 Connect to “**DUALSHOCK 4 Wireless Controller**”.

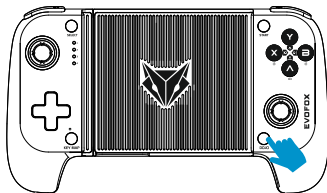

Download the official
EvoFox DOJO App

 


iOS / iPadOS

RECONNECTING: SIMPLY PRESS THE DOJO BUTTON TO POWER ON AND RECONNECT THE GAMEPAD TO THE LAST PAIRED MODE

OFFICIAL ANDROID MODE

- 1 Press the **DOJO** button for 2 sec.
- 2 Open Bluetooth Settings on your device.
- 3 Connect to “**Wireless Controller**”.

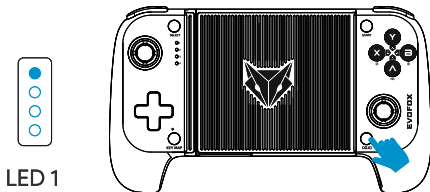

Download the official
EvoFox DOJO App

 


Android

RECONNECTING: SIMPLY PRESS THE DOJO BUTTON TO POWER ON AND RECONNECT THE GAMEPAD TO THE LAST PAIRED MODE

ANDROID HID MODE


- 1 Press **A** + **DOJO** button for 2 sec.
- 2 Open Bluetooth Settings on your device.
- 3 Scan the devices and pair with **"EvoFox Deck"**.

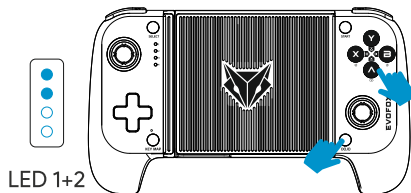

RECONNECTING: SIMPLY PRESS THE DOJO BUTTON TO POWER ON AND RECONNECT THE GAMEPAD

WINDOWS PC MODE

 - 1 Press **X** + **DOJO** button for 2 sec.
- 2 Open Bluetooth Settings on your device.
- 3 Scan the devices and pair with **"Xbox Wireless Controller"**.

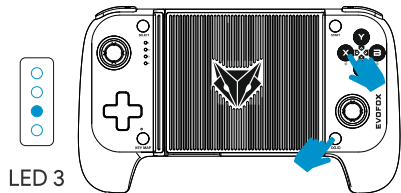


RECONNECTING: SIMPLY PRESS THE DOJO BUTTON TO POWER ON AND RECONNECT THE GAMEPAD

KEY MAP MODE (Only for Android)

Set up your gamepad to play games that do not have Native Controller Support.

 - 1 Press the **KEY MAP** button for 2 sec.
- 2 Open Bluetooth Settings on your device.
- 3 Connect to “**EvoFox Deck**”.

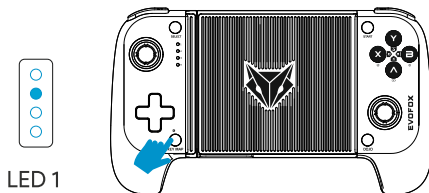

RECONNECTING: SIMPLY PRESS THE DOJO BUTTON TO POWER ON AND RECONNECT THE GAMEPAD TO THE LAST PAIRED MODE

HOW TO PROGRAM YOUR CONTROLLER FOR

KEY MAP MODE (Android Only)

Ready to Conquer PUBG/BGMI, Free Fire, Genshin, or Mobile Legends?
Follow this Guide to program your EvoFox Deck.

PUBG/BGMI Programming Steps:

1. Download ShootingPlusV3 App from Google Play Store (or Scan QR Code on the Side).
2. To Pair the EvoFox Deck over Bluetooth press **KEY MAP** button
Till the LED 2 starts Blinking Fast.
3. **Go to Bluetooth Settings** on your phone and connect to **EvoFox Deck**.
4. **Open the ShootingPlus V3** app and give the permissions as required.
5. ShootingPlusV3 includes Pre-mapped Controller Presets in the App for various games.
For eg: Free Fire, Minecraft, Genshin Impact, Mobile Legends, NBA 2K and more.
6. **Open PUBG/BGMI** App while ShootingPlusV3 is running in the background.
Navigate to Settings – Customize Buttons – Customize.
7. Click the ShootingPlusV3 “Icon  ” on the Screen to reveal all the Buttons available to map according to your in-game controls.



8. Now press **“Select” Button** (Top Area) – More Presets – PUBG Mobile – Download Preset.

This will add all the buttons which are available to map on your Screen.

9. Press the ShootingPlusV3 “Icon ” again to see all the available buttons on your Screen, drag and move keys or press desired Buttons on gamepad to Map Controls according to your preference.

 
10. Press **Select Button** on Gamepad to view all the keys assigned to the touch points.

11. Press **Start Button** on Gamepad to adjust keys on the touch points.

12. Always remember to press the **“Save” Button** (Top Area) to save the changes you have made.


You can program any other games such as **Free Fire** and more by following steps similar to above.

- Select your desired Game in steps 5 and 6.
- Follow Steps 1 to 4 and 7 to 12 for programming any other Game.

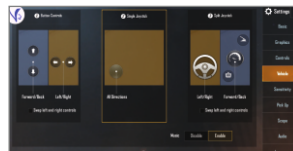


RESET THE GAMEPAD

 In the unlikely event the Gamepad is not responsive, use a pin to press the RESET button located at the back.

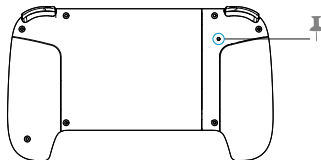


BACKLIGHT CONTROLS

 You can control the backlight for the Analog Joysticks and the Action Buttons.

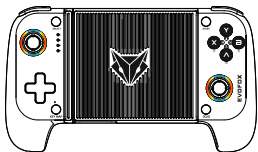

 Press **KEY MAP** +  to turn off
or switch LED colours of both
the Analog Joysticks.

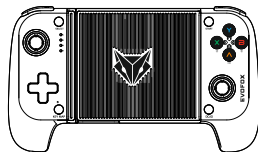

Press **KEY MAP** +  to toggle
the LED for the Action Buttons.

TROUBLESHOOTING

Why is this Gamepad not being detected by my device?

- Make sure it is charged.
- Make sure it is in the correct pairing mode.
- Make sure it is not connected to any other device.
- You may need to unpair and repair it.

Why is the Gamepad disconnecting?

The Gamepads needs to be charged.

Why is the Gamepad not working in all my games on Android or iOS?

Ensure the game has support of Gamepads.

Facing any trouble with the connection?

The gamepad may require you to unpair and reset it for further use.

SPECIFICATIONS

Working Platforms : iPhone, iPad, Android, PS4 PC	Connection Types : Bluetooth v5.1
	Charging Time : ~ 2-2.5 hrs
Working Modes : iOS, Android, Ps4, PC, Key Map (Android)	Working Distance : 10 Feet
	Net weight : 220g
Play Time : ~ 8 hrs	

WARRANTY STATEMENT

Amkette EvoFox Deck Smartphone Gamepad is backed by a 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced at its discrete under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

CUSTOMER CARE SERVICE CENTER

Amkette House, C-64/4, Okhla, Phase-II, New Delhi-110020



1800-11-9090 (Toll Free) (9:30 AM - 6:00 PM)



+91 9312691448 (9:30 AM - 6:00 PM)



techsupport@amkette.in

FOR HASSLE FREE SERVICE REGISTER YOUR PRODUCT AT WWW.AMKETTE.COM/REGISTER