

## USING TURBO MODES


The Turbo mode on the Gamepad enables automatic and rapid repetition of a button press with a single continuous input.

- Enter the TURBO Speed Function:**  
**ENABLE:** Press Turbo+ ABXY LT/RT LB/RB to enable the turbo on a particular button.  
**DISABLE:** Repeat **above** step to disable the turbo
- Adjust TURBO Speed:**  
Press Turbo+ DPAD (UP/DOWN) to increase or decrease the turbo speed.  
**Gamepad will Vibrate**
- Clear ALL TURBO Setting:**  
Long Press the turbo button to clear the turbo.  
All the **4 LEDs** will blink with a vibration.



-8-

## HOW TO CHANGE VIBRATION LEVELS?

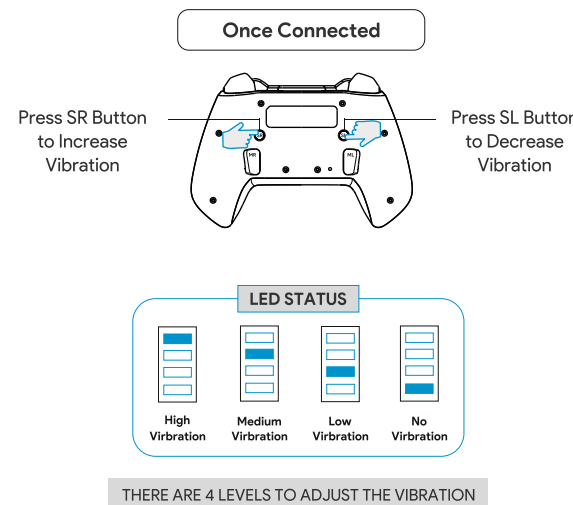

-9-

## HOW TO ENHANCE JOYSTICK PRECISION?


Make your Joystick movement more precise while using Key Map Mode.

### Enable Joystick Precision

Press E Z + Press LEFT JOYSTICK


### Disable Joystick Precision

Again Press E Z + Press LEFT JOYSTICK

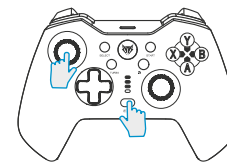

## RESETTING YOUR GAMEPAD

In the unlikely event the Gamepad is not responsive, use a pin to press the RESET button located at the back.

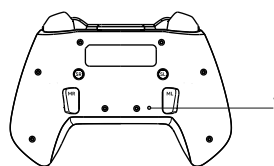

-10-

## TROUBLESHOOTING

### Why is the Gamepad not being detected by my device?

- Make sure it is charged.
- Make sure it is in the correct pairing mode.
- Make sure it is not connected to any other device.
- You may need to unpair and repair it.

### Why is the Gamepad disconnecting?

The Gamepad may need charging.

### Why is the Gamepad not working in some games on Android or iOS?

Many games are not designed to work with Native Gamepad support. Please check if the game you are playing supports the Gamepad.

### Facing any trouble with the connection?

The Gamepad may require you to Unpair or Reset.

## SPECIFICATIONS

|                     |                                                         |                    |                |
|---------------------|---------------------------------------------------------|--------------------|----------------|
| Working Platforms : | iPhone, iPad<br>Android Phone and TV<br>Jio Games Cloud | Connection Types : | Bluetooth v5.1 |
|                     |                                                         | Charging Time :    | ~ 2-2.5 hrs    |
| Play Time :         | ~ 8 hrs                                                 | Working Distance : | 10 Feet        |
|                     |                                                         | Net weight :       | 220g           |

-11-

## WARRANTY STATEMENT

Amkette EvoFox GO Wireless Gamepad is backed by a 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced at its discrete under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

## CUSTOMER CARE SERVICE CENTER

Amkette House, C-64/4, Okhla, Phase-II, New Delhi-110020


1800-11-9090 (Toll Free) (9:30 AM - 6:00 PM)

+91 9312691448 (9:30 AM - 6:00 PM)

techsupport@amkette.in


FOR HASSLE FREE SERVICE REGISTER YOUR PRODUCT AT [WWW.AMKETTE.COM/REGISTER](http://WWW.AMKETTE.COM/REGISTER)

## PRODUCT OVERVIEW

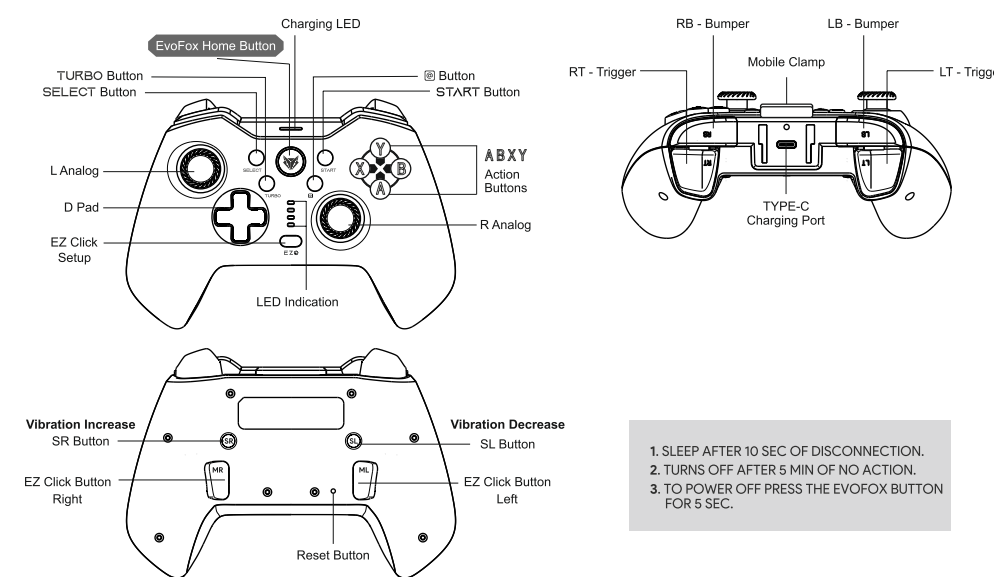


-2-

## IN THE BOX

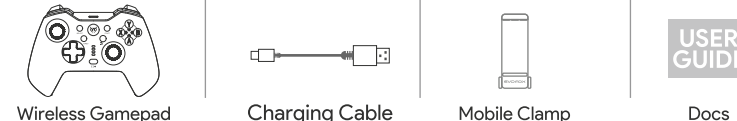


## CHARGING THE GAMEPAD

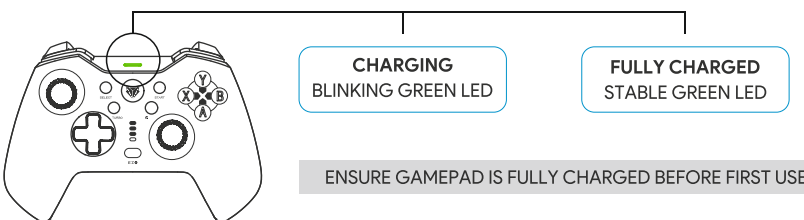 

-3-

## IPHONE, IPAD AND APPLE TV MODE

 - Press [Home] + [B]
- Open Bluetooth Settings on the device.
- Connect to "DUALSHOCK 4 Wireless Controller".

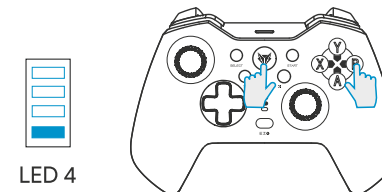


RECONNECTING: SIMPLY PRESS THE EVOFOX BUTTON TO POWER ON AND RECONNECT THE GAMEPAD

-4-

## ANDROID MODE

- Press [Home] + [B]
- Open Bluetooth Settings on the device.
- Connect to "Wireless Controller".

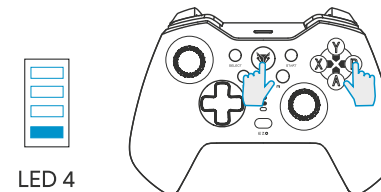

RECONNECTING: SIMPLY PRESS THE EVOFOX BUTTON TO POWER ON AND RECONNECT THE GAMEPAD

-5-

## KEY MAP MODE (Only for Android)

 
- Press [Home] + [A]
- Open Bluetooth Settings on the device.
- Connect to "EvoFox GO".

Set up your gamepad to play games that do not have Native Controller Support.

NOTE: FOR DETAILED INSTRUCTIONS, PLEASE REFER KEY MAP MODE PROGRAMMING GUIDE

## JIO GAMES

- Press [Home] + [RB]
- Open Bluetooth Settings on the device.
- Scan the devices and pair with "Xbox Wireless Controller"

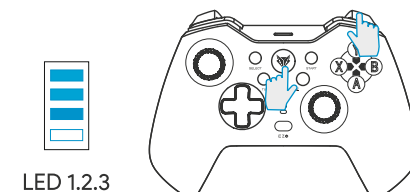

RECONNECTING: SIMPLY PRESS THE EVOFOX BUTTON TO POWER ON AND RECONNECT THE GAMEPAD

-6-

## HOW TO SET-UP MACROS?

The Gamepad's Macros feature enables the creation and playback of customized sequences of button inputs on a single button.

### Enable MACRO

Press E Z + MR or EZ+ ML together to set Macro .Connection LED will Blink.



- YOU CAN USE UP TO 14 BUTTON IMPRESSIONS TO SET UP THE MACRO.
- THE BUTTON SHOULD BE PRESSED ONLY IN THE SEQUENCE TO CREATE THE MACRO.

- Disable Macro  
Repeat the above step 1.

### CLEAR MACRO'S

Long Press E Z to clear the MACRO.  
All 4 LEDs will Blink.  
**Your MACRO is now cleared.**



-7-



WIRELESS GAMEPAD

QUICK START GUIDE

