

FRONT

WARRANTY STATEMENT

Amkette's Pocket Blast Bluetooth Speaker is backed by a 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

CUSTOMER CARE

Amkette House, C-64/4, Okhla Phase-II, New Delhi-110020



1800-11-9090 (Toll Free)
(9:30 AM - 6:00 PM)



+91 9312691448
(9:30 AM - 6:00 PM)



techsupport@amkette.in

For Hassle Free Service Register Your Product at www.amkette.com/register

POCKET BLAST Bluetooth Speaker




User Guide

-8-

BACK

KNOW YOUR SPEAKER

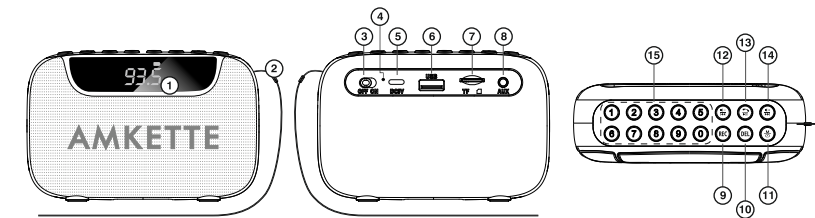

- | | | | |
|--------------------|-----------------|-------------------------|--|
| 1 LED Display | 5 Charging Port | 9 Recording Button | 13 Call / Play-Pause |
| 2 Antenna + Handle | 6 USB Port | 10 Recording Delete | 14 Vol+ / Next Song |
| 3 ON / OFF Button | 7 Micro SD Card | 11 Mode Button | 15 Number Keys |
| 4 Microphone | 8 Aux Port | 12 Vol- / Previous Song | (For FM and Song Selection in USB, Micro SD Card Mode) |

-2-

TROUBLESHOOTING

- **The speaker is not working.**
Check if the speaker is turned ON and the volume is adjusted properly. Make sure that the device is paired/cable connected and the music source volumes is not muted.
- **There is no power when speaker is turned ON.**
Please make sure that the speaker is properly charged before use.
- **Can I manually enter FM channels?**
Yes, you can manually enter your favourite FM channel by using number pad.
- **Can I record my voice and FM?**
Yes, you can record your voice and FM by pressing REC button, but make sure SD Card / USB is properly inserted.

-7-

TECHNICAL SPECIFICATIONS

Bluetooth	: v5.0
Output Power	: 3W + 3W (RMR)
Frequency	: 100Hz—18KHz
Input	: DC5V $\pm$ 500mA
Maximum Current Consumption	: 400mA
FM Radio Frequency	: 87.5 – 108Mhz
Battery Capacity	: 1500mAh
Playback Time	: 6 to 8 Hours*
Charging Time	: 2 to 3 Hours
USB / SD Playback	: MP3, WAV

* Playback time may vary at different volume levels.

-6-

IN THE BOX



HOW TO CHARGE

Plug the USB Charging Cable into the Speaker and connect to another USB power source.

Note: Fully Charge the speaker before using.

CHARGING	Stable RED LED
FULL CHARGE	LED Turns OFF

POWER ON / OFF

- To turn ON the speaker, slide the ON / OFF switch right ➡.
- To turn OFF the Speaker, slide left ⬅ the ON / OFF switch.

-3-

BLUETOOTH PAIRING

- Turn the speaker ON and press the mode to switch to Bluetooth Mode.
- Search for 'Amkette Pocket Blast' on your device and Connect.
- The speaker will issue an indication tone after the speaker has connected successfully.

Note: When the speaker is under Bluetooth mode, it will be connected to the last connected device by default. If you want to connect the speaker to another device, you need to disconnect from the original device.

FM RADIO MODE

- Press the mode button to switch to FM Mode.
- Press and hold Play/Pause button for a few seconds then release it to start the auto searching, short press it again to stop searching.
- Press Next button to select the next stations.
- Simply use the number key to select the preferred station.

-4-

AUX

- Connect to audio from a device.
- Plug one end of the audio cable into the speaker and the other end into a smartphone or other audio device.

USB / MICRO SD CARD

- Insert a Micro SD card or a USB drive to play MP3 music.
- Press the Next / Previous buttons to change songs.
- Alternatively, user can also type in the song number directly to play it.

RECORDING FUNCTION

Note: The recording function works only when the Micro SD Card / USB is inserted.

- Insert the Micro SD Card / USB.
- Long press the record button "REC" to start recording.
- Press the record button "REC" again to stop the recording.

The recorded audio auto-plays when the recording is stopped and is saved into Micro SD card / USB. You can record FM, Voice, Bluetooth music.

-5-