

USB / SD CARD PLAYBACK

- Insert a Micro SD Card or a USB Drive to play your favorite music.
- Press the Next / Previous buttons to change track.
- Alternatively, user can also type the song number directly to play it.

CONNECTION JACK


- Use a Earphone / Headphone for a personal audio experience.

SPECIFICATIONS

Output Power	: 5W	FM Radio Frequency	: 87.5 – 108Mhz
Frequency	: 100Hz—18KHz	Battery Capacity	: 1500mAh
Input	: 5V---1A	Playback Time	: Up to 8 Hrs*
Maximum Current	: 800mA	Charging Time	: 1.5 to 2 Hrs
Consumption		USB / SD Playback	: MP3, WAV

*Playback time may vary at different volume levels.

KNOW YOUR SPEAKER

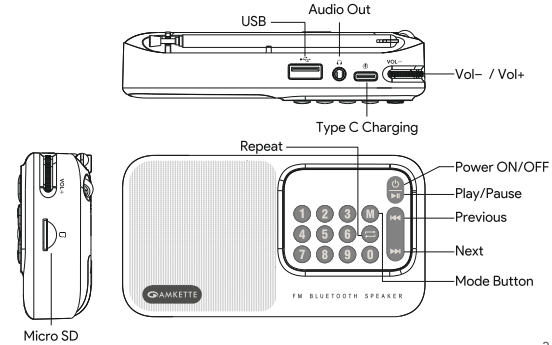

WARRANTY STATEMENT

 
Amkette's Pocket Mate FM Wireless Speaker is backed by a 1year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced at its discrete under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

AMKETTE CARE SERVICE CENTER

Amkette House, C-64/4, Okhla, Phase-II, New Delhi-110020




Let us care for our planet. Please help us dispose off his product responsibly, if not in use any longer.



For Hassle Free Service Register Your Product
www.amkette.com/register


Visit www.amkette.com/ewaste

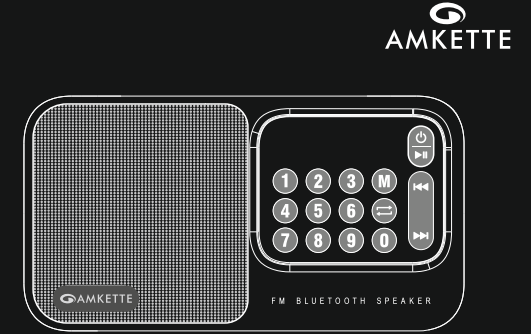

POCKET MATE

Quick Start Guide

IN THE BOX

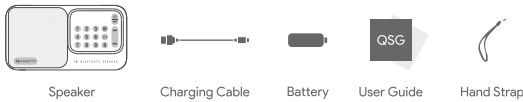

POWER ON

- Insert the provided 1500mAh battery.
- Now press and hold the Power Button for 2 sec to turn ON the speaker.

CHARGING

- Plug the USB Charging Cable into the Speaker and connect to another USB Power Source.

Note: Fully Charge the speaker before using.

While Charging- Alternately blinking battery symbols on screen.
After Charging- Stable battery symbol on screen.

WIRELESS PAIRING

- Turn the speaker ON and it will enter to the Wireless Mode.
- Search for 'Amkette Pocket Mate' on your device and Connect.
- The speaker will issue an indication tone after the speaker has connected successfully.

Note: When the speaker is under Wireless mode, it will be connected to the last connected device by default. If you want to connect the speaker to another device, you need to disconnect from the original device.

FM RADIO MODE

- Pull out the Antenna and check it is fully open.
- Press the Mode Button to switch to FM Mode.
- Press and hold the Button for a few seconds then release it to start the auto searching, short press it again to stop searching.
- Press the Next button to select the next stations.
- Simply use the number key to select the preferred station.

TROUBLESHOOTING

The speaker is not working.

Check if the speaker is turned ON and the volume is adjusted properly. Make sure that the device is paired and the music source volume is not muted.

There is no power when the speaker is turned ON.

Please make sure that the speaker is properly charged before use.

Can I manually enter FM channels?

Yes, you can manually enter your favourite FM channel by using a number pad.