

| DOCUMENT DETAILS <span>V1</span> |              |
|----------------------------------|--------------|
| Product:                         | Wikey Mini 2 |
| Type:                            | User Manual  |
| Date Updated:                    | 08-05-2025   |

#### WARRANTY STATEMENT

Amkette Wi Key Mini 2 Wireless Keyboard and Mouse is backed by a 1 Year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced at its discrete under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Customer Support Line and/or send the defective product, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return charges will be paid by us.

#### CUSTOMER CARE SERVICE CENTRE

Amkette House, C-64 / 4, Okhla Phase – II, New Delhi – 110020

1800-11-9090 (Toll Free)  
(9:30 AM - 6:00 PM) Mon – Sat

+91 9312691448  
(9:30 AM - 6:00 PM) Mon – Sat

techsupport@amkette.in

For Hassle Free Service Register your product online at [www.amkette.com/register](http://www.amkette.com/register)



## WI KEY MINI 2

 
Wireless Keyboard and Mouse

### QUICK START GUIDE

#### WHATS IN THE BOX



#### KNOW YOUR KEYBOARD

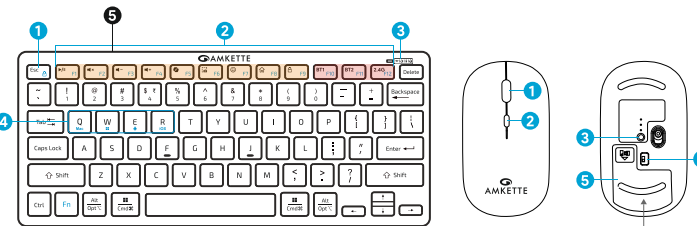

##### Keyboard

- 1 Fn Lock
- 2 Shortcuts | Connection Multimedia
- 3 LED Indicators | Connect Fn Lock Battery Caps Lock
- 4 OS Mode Switch
- 5 Battery Compartment

Back side of the Keyboard

##### Mouse

- 1 Scroll Wheel
- 2 DPI Button
- 3 Mode Switch
- 4 ON/OFF Switch
- 5 Battery Compartment

USB Receiver

-2-

#### TECHNICAL SPECIFICATIONS

##### KEYBOARD

|                      |                             |
|----------------------|-----------------------------|
| Keyboard Type        | : Wireless Keyboard         |
| Connectivity         | : 2xBT + 1x2.4GHz           |
| Multimedia Keys      | : 12                        |
| Batteries            | : 2*AAA (Included)          |
| Compatible Platforms | : Mac/Win/Linux/Android/iOS |
| Switch Type          | : Scissor Keys              |
| Dimensions           | : 285 x 117 x 17 mm         |
| Weight               | : 259g                      |

##### MOUSE

|              |                                   |
|--------------|-----------------------------------|
| Connectivity | : 2xBT + 1x2.4GHz                 |
| Chipset      | : Instant S201                    |
| DPI          | : 800, 1200 (default), 1600, 3200 |
| Batteries    | : 1*AA (Included)                 |
| Switch       | : Huano Silent Clicks             |
| Dimensions   | : 110 x 60 x 32 mm                |
| Weight       | : 57g                             |

 
-7-

#### HOW TO USE ₹ SYMBOL


##### Change Language Settings

Go to your computer's language settings and set keyboard's language to **English (India)**.

You may need to restart your device after changing your Computers language settings.




#### WORKS WITH ALL YOUR DEVICES

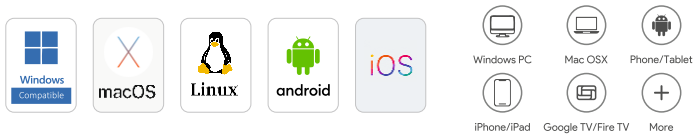 


#### LED INDICATORS

 
##### LOW BATTERY




##### FN LOCK

 

##### OS MODE SWITCH

 

##### CAPS LOCK

 

-6-

#### Fn LOCK

By default, Fn Lock is OFF with access to default media functions.  
Press **Fn + Esc** to Toggle the Fn Lock.



#### SHORTCUT KEYS & OS SWITCH



To ensure optimal performance of the MM functions, please select the operating system you are using from the available set of keys above.

|                         |                          |
|-------------------------|--------------------------|
| <b>F1</b> — Play/Pause  | <b>F7</b> — Emotion      |
| <b>F2</b> — Mute        | <b>F8</b> — Home         |
| <b>F3</b> — Volume Down | <b>F9</b> — Lock         |
| <b>F4</b> — Volume Up   | <b>BT1 F10</b> — BT1     |
| <b>F5</b> — Copilot     | <b>BT2 F11</b> — BT2     |
| <b>F6</b> — Screenshot  | <b>2.4G F12</b> — 2.4GHz |

-3-

 
#### CONNECTION GUIDE

Insert the given Batteries in both Keyboard & Mouse to get started.

By default, Fn Lock is OFF with access to default media functions.  
Press **Fn + Esc** in case Fn Lock is activated.

##### With USB 2.4GHz

Take out the USB dongle from the USB receptacle on the back of keyboard and insert it in to a USB port to connect both Keyboard & Mouse.



ON KEYBOARD: Press F12 to switch to the USB 2.4GHz mode.



ON MOUSE: Toggle through Switch Mode Button till Led 1 flashes.




-4-

##### With Bluetooth

 You can connect with up to 2 devices via Bluetooth.

##### BT Device 1

ON KEYBOARD: Press F10 to switch to the BT 1 mode.

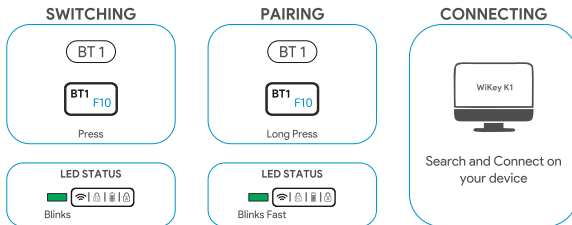

ON MOUSE: Toggle through Switch Mode Button till Led 2 flashes.



Repeat the process for BT Device 2, for both Keyboard & Mouse.

-5-