AMKETTE

PRIMUS NXT

WIRELESS KEYBOARD AND MOUSE COMBO

QUICK START GUIDE

WHAT'S IN THE BOX

- Wireless Keyboard
- Wireless Mouse
- USB 2.4GHz Nano Receiver
- Docs

KNOW YOUR KEYBOARD AND MOUSE

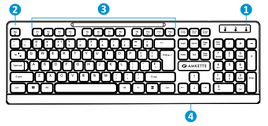



Keyboard

1. LED Indicators
2. FN Lock
3. Multimedia Keys
4. Battery Compartment
   Back side of the Keyboard

Mouse

1. Scroll Wheel
2. DPI Button
3. ON/OFF Switch
4. Battery Compartment/ USB Receptacle

FN LOCK

By default, Fn Lock is OFF with access to standard function keys.
Press **Fn + Esc** to Toggle the Fn Lock.

Fn + Esc — Function Lock

LED STATUS: Blinks

MULTIMEDIA KEYS

To use multimedia functions (such as volume control, play/pause, etc.), press Fn + the corresponding function key (F1–F12).
For easier access, you can enable Fn Lock by pressing **Fn + Esc**, allowing you to use multimedia functions directly without holding the Fn key.

- Home
- Email
- Search
- Music
- Play/Pause
- Backward
- Forward
- Vol -
- Vol +
- Mute
- This PC
- Calculator

CONNECTION GUIDE

Before proceeding with the connection process, please ensure that AA batteries are properly inserted in both the Keyboard and the Mouse.

Keyboard Manual Pairing: Press **Esc + Q**, Wait for LED blink, Plug in USB receiver.
Mouse: Automatically reconnects when the receiver is inserted.

With USB 2.4GHz

Take out the USB dongle from the USB receptacle on the back of Mouse and insert it in to a USB port to connect both Keyboard & Mouse.

Insert the 2.4G USB receiver into your device. The keyboard and mouse will connect automatically.

TROUBLESHOOTING

Why are my keyboard and mouse not responding?

- Ensure both devices have working AA batteries and are powered ON.
- Confirm the Nano USB receiver is properly inserted. Try a different USB port if needed.
- Move devices closer to the receiver to avoid signal interference.
- Replace batteries if the LED blinks (low battery indicator).

Why are my keyboard's multimedia keys not working?

- Press Fn + Esc to toggle Fn Lock.
- Ensure your operating system supports multimedia shortcuts.

Why is my mouse pointer moving too fast or too slow?

Press the DPI button to adjust sensitivity between 800 / 1200 / 1600 / 3200.

Why is there no connection after changing the USB receiver?

Re-pair the keyboard manually:
→ Press Esc + Q, wait for LED blink, then insert the USB receiver.

HOW TO USE ₹ SYMBOL

- **Change Language Settings**
  Go to your computer's language settings and set keyboard's language to **English (India)**.

You may need to restart your device after changing your Computers language settings.

For Windows: Ctrl + Alt + $ ₹ 4

For Mac: Alt + $ ₹ 4

LED INDICATORS

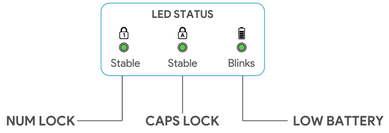

TECHNICAL SPECIFICATIONS

KEYBOARD

Connectivity	:	2.4GHz Wireless (via Nano USB Receiver)
Multimedia Keys	:	12
Battery	:	1xAA(not included)
Compatible Platforms	:	Windows/macOS/Linux/Chrome OS
Switch Type	:	Silent Membrane Keys
Dimensions	:	435 x 133 x 20 mm
Weight	:	353gm

MOUSE

Connectivity	:	2.4GHz Wireless (via Nano USB Receiver)
Sensor	:	S201B Optical Sensor
DPI	:	800, 1200(Default), 1600, 3200
Battery	:	1 x AA (Not Included)
Switch Type	:	Silent Switches
Dimensions	:	110 x 32.8 x 73 mm
Weight	:	55gm

WARRANTY STATEMENT

Amkette Primus Nxt Wireless Keyboard and Mouse Combo is backed by a 1 Year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced at its discretion under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Customer Support Line and/or send the defective product, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return charges will be paid by us.

CUSTOMER CARE SERVICE CENTRE

Amkette House, C-64 / 4, Okhla Phase – II, New Delhi – 110020

1800-11-9090 (Toll Free)
(9:30 AM - 6:00 PM) Mon – Sat

+91 9312691448
(9:30 AM - 6:00 PM) Mon – Sat

techsupport@amkette.in

For Hassle Free Service Register your product online at www.amkette.com/register