EASY CLICK SETUP (MACROS)

1. **Enter EASY CLICK Setup**
   Long Press ✥ + MR or ML Button

2. Setup the MACRO using following buttons ➡

3. Now Press MR or ML button to exit the MACRO Set Up.

1. TWO BUTTONS CAN BE USED IN COMBINATION
2. UP TO 8 BUTTONS CAN BE USED TO CREATE THE MACRO

4. **CLEAR MACRO'S**
   Long Press ✥ + MR or ML Button, to clear the MACRO Until the LED Flashes.
   Your MACRO is now cleared.

TURBO SETTINGS

1. **Enter the TURBO Speed Function:**

   ENABLE: Press the TURBO button and one of the following buttons.

   DISABLE: Press Clear + Button to which TURBO is assigned.

2. **Adjust TURBO Speed:**

   Press the TURBO button with the DPAD to increase or decrease the turbo speed.

3. **Clear ALL TURBO Setting:**

   Long Press Turbo Button until the Gamepad Vibrates

CHANGING VIBRATION LEVELS

Press ✥ + Left or Right Dpad Button to increase or decrease the vibration respectively.



THERE ARE 4 LEVELS TO ADJUST THE VIBRATION

ENHANCE JOYSTICK PRECISION

Enable Joystick Precision
Press ✧ Button.

Disable Joystick Precision
Again Press ✧ Button.

Precision Mode: This feature reduces the sensitivity of the right joystick by 50%, enabling smoother and more precise control for aiming and fine movements during gameplay. Ideal for situations that require accuracy, such as sniping or fine adjustments in racing and FPS games.

RESET THE GAMEPAD

In the unlikely event the Gamepad is not responsive, use a pin to press the RESET button located at the back. Ensure gamepad is on a flat surface and none of the keys or triggers are pressed.

TROUBLESHOOTING

Why is the Gamepad not being detected by my computer?
- Make sure the computer USB port is working. Try a different USB Port.

Why is the Gamepad Disconnecting?
- Make sure your Gamepad is fully charged.
- Ensure clear line of sight while using the Gamepad.
- Depending on your setup you may need to use a USB Extender Cable.

Why is the Gamepad not working in all my games?
- Ensure that the game has support for Gamepads.
- Set the Gamepad mode to D-Input and try again.

Why is the Gamepad not vibrating?
- Not all Games have vibration or the vibration setting needs to be turned on (in the game).

SPECIFICATIONS

Working Platforms	Windows 7 and Above	**Play Time**	Up to 10 Hours
Working Modes	PC – X-Input / D-Input	**Connection Type**	Wired and 2.4G
Triggers and Joysticks	HallSense™ Magnetic	**Charging Time**	3 - 3.5Hrs
Vibration Motors	Dual Vibration Motors	**Product Dimension**	160x110x68mm
Charging Port	Type-c	**Product Weight**	250.4g
Battery	800 mAh		

WARRANTY STATEMENT

Amkette EvoFox Elite X2 PC Wireless Gamepad is backed by a 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

CUSTOMER CARE SERVICE CENTER

Amkette House, C-64/4, Okhla, Phase-II, New Delhi-110020

1800-11-9090 (Toll Free) (9:30 AM - 6:00 PM Mon-Sat)

+91 9312691448 (9:30 AM - 6:00 PM Mon-Sat)

techsupport@amkette.in

FOR HASSLE FREE SERVICE REGISTER YOUR PRODUCT AT **WWW.AMKETTE.COM/REGISTER**

EVOFOX

PLAY WITH POWER

PRODUCT OVERVIEW

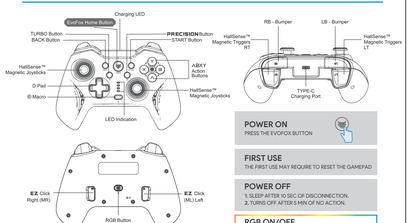

POWER ON
PRESS THE EVOFOX BUTTON

FIRST USE
THE FIRST USE MAY REQUIRE TO RESET THE GAMEPAD.

POWER OFF
1. SLEEP AFTER 10 SEC OF DISCONNECTION.
2. TURNS OFF AFTER 5 MIN OF NO ACTION.

RGB ON/OFF
1. PRESS ✱ TO CHANGE THE RGB EFFECT.
2. PRESS ✱ AND HOLD TO TURN THE RGB OFF.

IN THE BOX

CHARGING THE GAMEPAD



ENSURE GAMEPAD IS FULLY CHARGED BEFORE FIRST USE

CONNECTION VIA 2.4G

COMPATIBILITY – SUPPORTED WINDOWS VERSION ➡ Windows 7, 8, 10,11

1. Connect the USB Receiver in a free USB port on your PC
2. Press the EvoFox button to turn the Gamepad ON

GAMEPAD ALWAYS STARTS IN X-INPUT MODE

PAIRING
1. Insert the dongle into a USB port and long press its button until the LED blinks fast.
2. Long press the EvoFox button on the gamepad until the LEDs blink fast.
3. The gamepad will connect automatically.

FIRST TIME SETUP MAY REQUIRE A PRESS OF THE RESET BUTTON AFTER PLUGGING IN THE USB RECEIVER.

CONNECTION VIA USB WIRED

COMPATIBILITY – SUPPORTED WINDOWS VERSION ➡ Windows 7, 8, 10,11

1. Connect the USB Type C Cable in a free USB port on your PC
2. Connect the Type C Cable end in to the Gamepad.

   Your Gamepad is ready to use!

GAMEPAD ALWAYS STARTS IN X-INPUT MODE

FIRST TIME SETUP MAY REQUIRE A PRESS OF THE RESET BUTTON AFTER PLUGGING IN THE USB RECEIVER.

CHANGING MODES IN WINDOWS PC

X-Input <-> D-Input

Long Press **BACK** and **START** Button, until the LED indicators change.

In 2.4G Mode

In Wired Mode